



Warner Electric UNIBRAKE® Motor Brakes

P-1699-WE

Installation & Operating Instructions

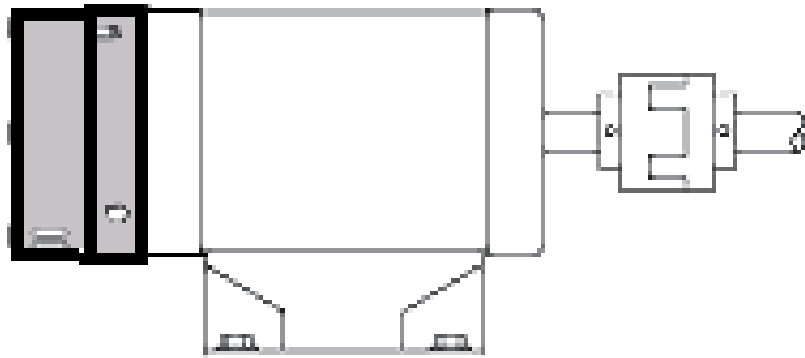

Rear Mounted

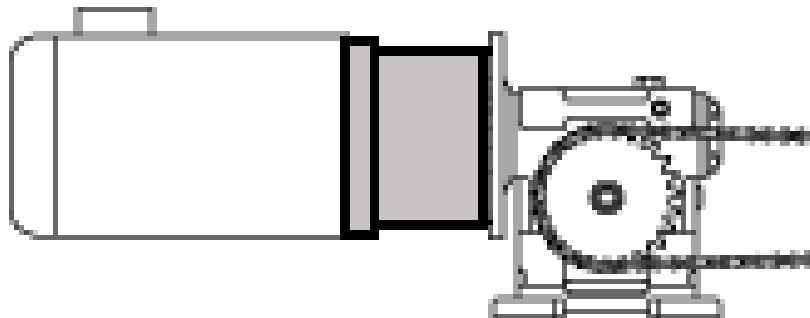

Double "C" Coupler



An Altra Industrial Motion Company

Contents

General Information	2
Brake Heads	2
Installation	3
Wiring	4
Wear Adjustments	4
Torque Adjustments	5
Disc Replacement	5
Coil Replacement	5
Service Parts	6
Warranty	Back Page

General Information

⚠ WARNING Motor Brakes are not a fail safe device. Where holding load represents a risk of property damage, and/or personal injury, an independent fail safe device must be supplied independent of this brake. These safety devices are neither provided nor are they the responsibility of Warner Electric.

Warner Electric Unibrake motor brakes are spring set, electro-magnetic release, direct acting, disc brakes for the controlled stopping and holding of a load. They have single phase electro-magnetic coils in standard voltages and frequencies and are factory set for rated retarding torque.

Construction


Unibrakes utilize one or more non-asbestos friction discs mounted on a metal hub which is fastened to a rotating shaft. The brake uses a two ball pivot design for its armature plate. It also has a self resetting manual release lever. Anti-rattle clip between the rotating disc and hub help reduce torsional vibration and pulsation noise. Rear mounted Unibrakes are available in standard aluminum or cast iron housed constructions and the double NEMA “C” Face coupler in aluminum only.

Operation


When properly connected, starting the motor energizes the brake magnet coil, attracting the armature to the coil, compressing the torque springs, releasing pressure on the stationary plates, permitting the brake discs to rotate freely. When the motor and the brake magnet coil de-energize, this decompresses the torque springs, forcing the rotating disc(s) and stationary pressure plates together, stopping and holding the motor shaft and load.

When the motor is ‘off,’ to move the driven load without energizing the motor, rotating the manual release lever 90 degrees clockwise removes the retarding torque from the motor shaft letting the load be hand-moved. The lever returns to the normal “set” position when the brake is re-energized.

Brake Heads

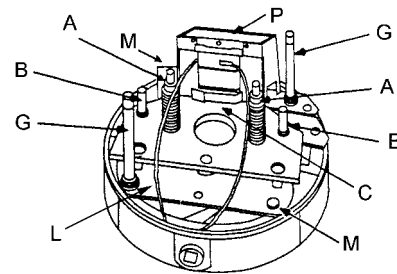

Rear Mounted

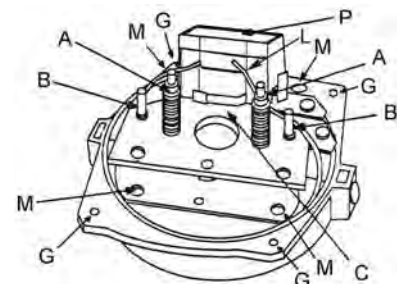


Double “C” Face Coupler

- A = Torque Adjust Nuts and Springs
- B = Wear Adjustment Screws
- C = Armature Plate
- G = Cover Mounting (2) Studs Rear Mounted, (4) Bolts/Nuts Coupler
- L = Lead Wires
- M = Mounting Holes (2 rear mounted, 4 coupler)
- P = Solenoid (coil)

⚠ WARNING Any mechanism or load held in position by the brake should be checked to avoid possible damage or injury to personnel before brake is released manually.



Installation

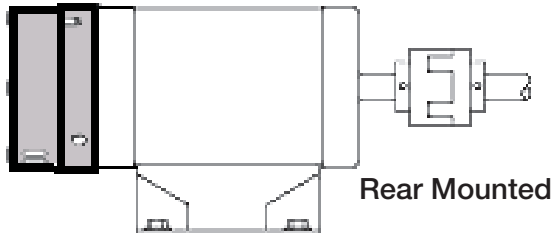


Rear Mounted

Remove cover from brake, locate brake hub. Attach hub to shaft using key and set screw provided. Position hub from mounting face of motor as shown for your type of brake head. Tighten set screws to 55-100 in. lbs. of torque. Slip brake head assembly over brake hub and onto the motor mounting face. Fasten with (2) 3/8 inch socket head cap screws. Cover will be assembled after brake is wired. Leads should be twisted and inserted into the insulation sleeve and routed to conduit port or openings through back of motor.

Rear Mounted

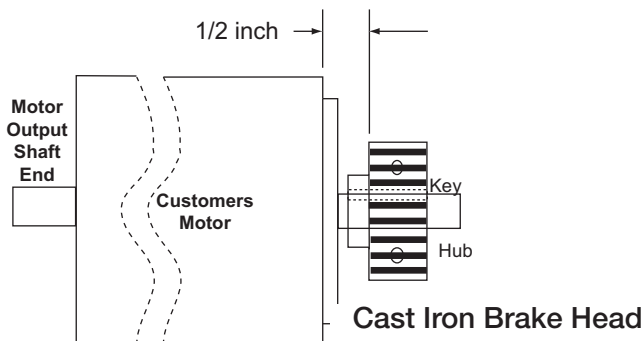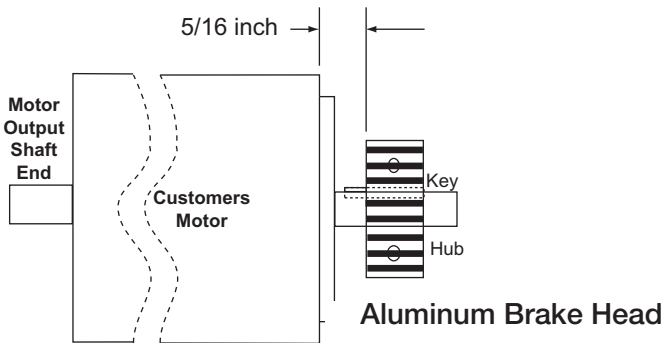



⚠ WARNING Coupler style output shaft must be direct coupled to load not for belted or any type overhung load applications.

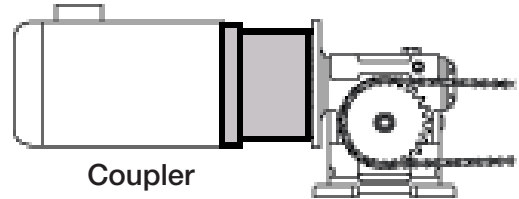

Coupler

Remove (4) hex screws and lift off cover/shaft assembly. Remove brake hub and attach it to the motor shaft using the long key and set screws. Locate hub 5/16 inch away from mounting face of motor as shown below. Tighten setscrews to 55-100 in. lbs. of torque. Slip brake head assembly over brake hub and onto the motor mounting face. Fasten with (4) 3/8-16 socket head cap screws. Leads should be twisted and routed across top front of coil away from rotating brake hub and then routed through lead clip on side of coil. Replace brake cover/shaft assembly after wiring by inserting keyed shaft into the brake hub extension and guiding cover over the brake head assembly, the center window should be located over brake release lever to allow for gap inspection. Secure with (4) hex bolts and nuts.

Coupler

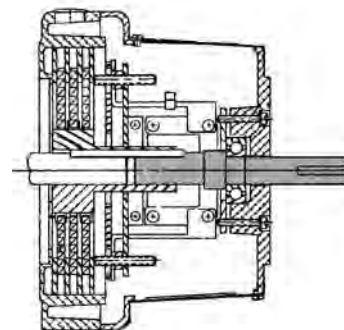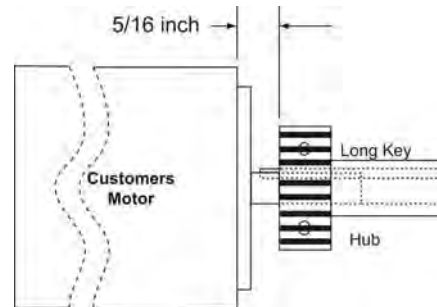

Wiring

⚠ WARNING Disconnect power before touching any internal part.

Unibrake magnet coils (AC) are single phase and dual voltage. These can be wired internal to the motor. Direct current brake coils must be separately operated; switch contacts to control the brake must be different from those used to control the motor. Normally, motor and brake contacts must be interlocked.

Determine the voltage of the brake and use the appropriate wiring instructions below.

Motor	Voltage	Brake Leads (B) to Motor Leads (T) or Separate Power Supply		
3 Phase AC	Low Voltage	B1 & B3 to T1 & T7	B2 & B4 to T2 & T8	
	High Voltage	B1 to T1	B2 to B3	B4 to T2
1 Phase AC	Low Voltage	B1 & B3 to T1 & T3	B2 & B4 to T2 & T4	
	High Voltage	B1 to T1	B2 to B3	B4 to T4
Separately AC	Low Voltage	B1 & B3 to Line 1 (L1)	B2 & B4 to Line 2 (L2)	
	High Voltage	B1 to Line 1 (L1)	B2 to B3	B4 to Line 2 (L2)
Separately DC	24 or 90 VDC	B1 to DC +	B2 to DC -	
Coils are not polarity sensitive connections can be reversed.				


Wear Adjustments

⚠ WARNING 1) Disconnect power brake before touching any internal part. 2) Any loads that are held in position by this brake must be supported before performing any adjustments or maintenance.

Unibrake discs require periodic adjustment due to expected wear. On rapid cycling applications regular inspections should take place, i.e. after 20,000 to 50,000 cycles for the first inspection and then every 150,000 to 200,000 cycles. Adjustments should be made to the air gap between the armature and magnet for continued brake effectiveness. If an increase in stopping time is noted adjust brake as follows:

Gap Chart

No. of Discs	Gap "G"
1	.075 inch
2 or 3	.090 inch

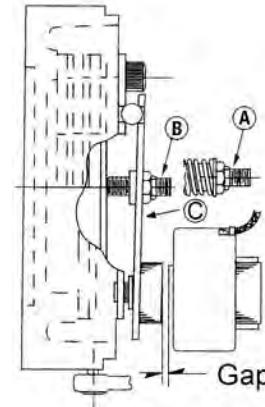

Rear Mounted

Remove cover; turn both screws "B" equal amounts in a clockwise direction until air gap (Gap "G") from above chart is obtained. Measurement of air gap should be made at approximate center of magnet with pressure applied to armature plate "C" to assure plate is seated on pivot balls. Failure to adjust for wear will result in eventual loss of braking torque.

Note: Unequal adjustment of screws "B" will result in unequal pivot action on balls that will increase noise and shorten brake life.


Coupler

Remove the 3 window covers, turn both screws "B" equal amounts in a clockwise direction until air gap (Gap "G") from above chart is obtained. Measurement of air gap should be made at approximate center of magnet with pressure applied to armature plate "C" to assure plate is seated on pivot balls. Failure to adjust for wear will result in eventual loss of braking torque.

Note: Unequal adjustment of screws (B) will result in unequal pivot action on balls that will increase noise and shorten brake life.

Torque Adjustments


Most applications do not require torque adjustments. Unibrakes are factory set for rated torque which is maximum torque. To increase stopping time or reduce torque on 3, 6, and 10 ft. lb., turn 2 lock nuts "A" an equal amount counter-clockwise to increase spring length. For the 6, 10, and 15 ft. lb. brakes, one full turn will reduce torque by about 12-1/2%. The 3 ft. lb. brake will be reduced in torque by about 8%. Torque should not be reduced by less than 1/2 of the rated torque.

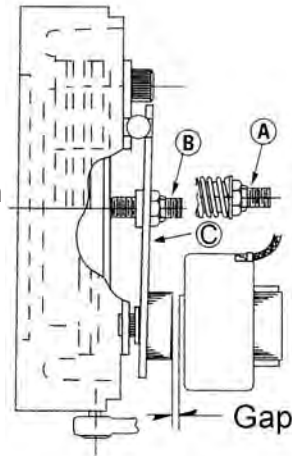


If torque is adjusted, measure air gap (see wear adjustment) and verify it is within dimensions from Gap Chart.

⚠ WARNING 1) Disconnect power brake before touching any internal part. 2) Any loads that are held in position by this brake must be supported before performing any adjustments or maintenance.

Friction Disc Replacement

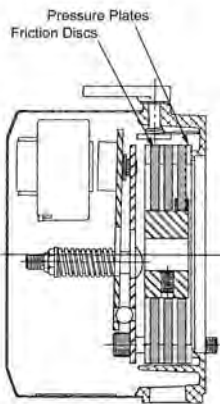

Rear Mounted

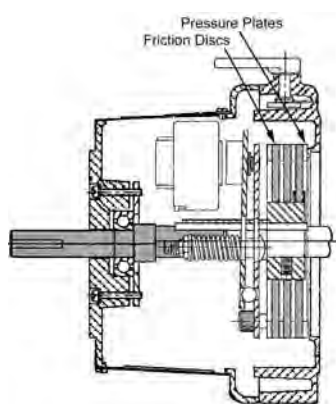

Coupler

Rear Mounted

Remove cover, (2) cover support studs "G", and (2) 3/8-16 mounting cap screws at "M".


Lift off brake mechanism assembly. Remove pressure plate(s) and brake disc(s). Replace with new pressure plate(s) and disc(s). Reassemble brake mechanism assembly. Multiple disc units, the domed pressure plate is positioned furthest away from the motor or brake head; the (B) wear adjustment screws are in contact with this plate.

Note: Cast Iron Heads: Last disc uses the cast housing as a friction surface. Set air gap for wear adjustment.

Coupler

Remove (4) hex head screws that hold the cover/shaft assembly to the brake head. Remove the (4) 3/8-16 mounting cap screws at "M." Remove (2) 1/4-20 round head screws and lift off brake mechanism assembly. Remove pressure plate(s) and brake disc(s). Replace with new pressure plate(s) and disc(s). Reassemble brake mechanism assembly. Multiple disc units, the domed pressure plate is positioned furthest away from the motor or brake head; the (B) wear adjustment screws are in contact with this plate. Set air gap for wear adjustment.

Magnetic Coil Replacement

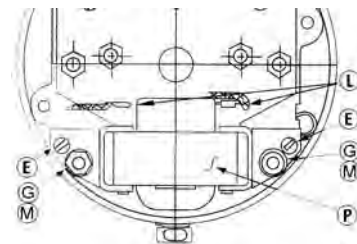

Rear Mounted

Remove cover, (1) cover support stud "G", (1) 3/8-16 mounting cap screw "M" and (2) slotted screws "E".

Lift off complete coil assembly “P” and replace with new coil assembly of proper electrical rating. Position leads so as to avoid contact with rotating parts. Set air gap for wear adjustment.


Coupler

Remove (4) hex head screws that hold the cover/shaft assembly to the brake head. Remove (2) 3/8-16 mounting cap screws at “M”. and (2) slotted screws “E”. Lift off complete coil assembly “P” and replace with new coil assembly of the proper electrical rating. Position leads so as to avoid contact with rotating parts. Set air gap for wear adjustment. Replace cover/shaft assembly per installation instructions.

Service Parts

Disc/Pressure Plate Kits

Number Discs	Kit Number	Kit Contents
Aluminum Heads		
1	327212-1	1FD, 1DPP and 1FPP
2	327212-2	2FD, 1DPP and 2FPP
3	327212-3	3FD, 1DPP and 3FPP
Cast Iron Heads		
1	327212-4	1FD and 1DPP
2	327212-5	2FD, 1DPP and 1 FPP
3	327212-6	3FD, 1DPP and 2FPP
FD = Friction Disc, DPP = Domed Plate FPP = Flat Plate		
Friction Disc Only		
1	327213	Disc with Anti-rattle clip

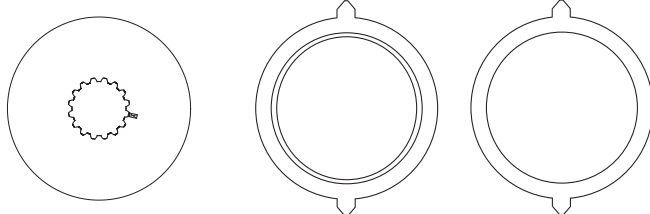


Friction Disc (FD)
5 inch diameter

Pressure Plates
Domed (DPP) / Flat (FPP)

Rear Mounted Hubs

Bore	Hub Number
5/8	58D23
3/4	58D23
7/8	58D24

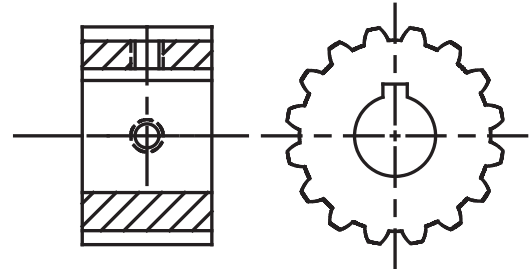


Hub

Coil Assembly (Solenoids)

Unibrake magnet coils (AC) are single phase.

Coil Voltage	Coil Part No.	DC Resistance*
60/115/230 VAC	79137-18-K	Leads B1 to B2 or B3 to B4 = 8.7 Ohms
50/115/230 VAC	79137-18-N	Leads B1 to B2 or B3 to B4 = 11.5 Ohms
50/220/440 VAC	79137-18-P	Leads B1 to B2 or B3 to B4 = 43.5 Ohms
60/230/460 VAC	79137-18-J	Leads B1 to B2 or B3 to B4 = 34.5 Ohms
60/200/400 VAC	79137-18-L	Leads B1 to B2 or B3 to B4 = 24.3 Ohms
60/287/575 VAC	79137-18-G	Leads B1 to B2 or B3 to B4 = 54.5 Ohms
50/208/416 VAC	79137-18-M	Leads B1 to B2 or B3 to B4 = 35.6 Ohms
24 VDC	327208	Leads B1 to B2 = 26.4 Ohms
90 VDC	327209	Leads B1 to B2 = 390 Ohms

*Resistance values plus or minus 10% at 25°C

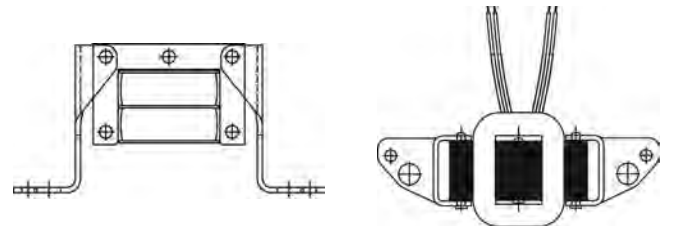

Coil Assembly



INDUSTRIAL MAGZA
DIST. AUTORIZADO

MEX (55) 53 63 23 31
QRO (442) 1 95 72 60

MTY (81) 83 54 10 18
ventas@industrialmagza.com

Warranty

Warner Electric LLC warrants that it will repair or replace (whichever it deems advisable) any product manufactured and sold by it which proves to be defective in material or workmanship within a period of one (1) year from the date of original purchase for consumer, commercial or industrial use.

This warranty extends only to the original purchaser and is not transferable or assignable without Warner Electric LLC's prior consent.

Warranty service can be obtained in the U.S.A. by returning any defective product, transportation charges prepaid, to the appropriate Warner Electric LLC factory. Additional warranty information may be obtained by writing the Customer Satisfaction Department, Warner Electric LLC, 449 Gardner Street, South Beloit, Illinois 61080, or by calling 815-389-3771.

A purchase receipt or other proof of original purchase will be required before warranty service is rendered. If found defective under the terms of this warranty, repair or replacement will be made, without charge, together with a refund for transportation costs. If found not to be defective, you will be notified and, with your consent, the item will be repaired or replaced and returned to you at your expense.

This warranty covers normal use and does not cover damage or defect which results from alteration, accident, neglect, or improper installation, operation, or maintenance.

Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

Warner Electric LLC's obligation under this warranty is limited to the repair or replacement of the defective product and in no event shall Warner Electric LLC be liable for consequential, indirect, or incidental damages of any kind incurred by reason of the manufacture, sale or use of any defective product. Warner Electric LLC neither assumes nor authorizes any other person to give any other warranty or to assume any other obligation or liability on its behalf.

WITH RESPECT TO CONSUMER USE OF THE PRODUCT, ANY IMPLIED WARRANTIES WHICH THE CONSUMER MAY HAVE ARE LIMITED IN DURATION TO ONE YEAR FROM THE DATE OF ORIGINAL CONSUMER PURCHASE. WITH RESPECT TO COMMERCIAL AND INDUSTRIAL USES OF THE PRODUCT, THE FOREGOING WARRANTY IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES, WHETHER EXPRESSED OR IMPLIED BY OPERATION OF LAW OR OTHERWISE, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Changes in Dimensions and Specifications

All dimensions and specifications shown in Warner Electric catalogs are subject to change without notice. Weights do not include weight of boxing for shipment. Certified prints will be furnished without charge on request to Warner Electric.



Warner Electric LLC
449 Gardner Street • South Beloit, IL 61080
815-389-3771 • Fax: 815-389-2582
www.warnerelectric.com
An Altra Industrial Motion Company