

# Re-gap Adjustment Procedure

P-0330  
819-0545


Service & Instalation Instructions



## When to remove shim:

When a clutch has worn to the extent that the existing air-gap is too large to allow for complete clutch engagement (clutch may engage easily when cold but has problems engaging when hot), the brake shim can be removed to restore air gap and allow the clutch to continue to function. (With engine off, key removed and clutch disengaged)

After verifying that proper voltage and current are supplied to the clutch as outlined by the operator's manual, proceed with procedure outlined below.

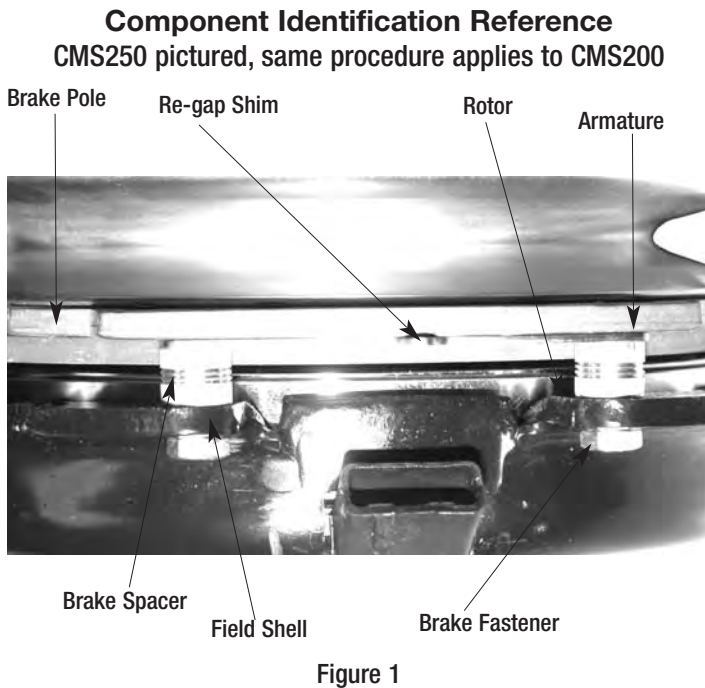

## Procedure:

**⚠ WARNING** Consult the operator's manual for all related procedures & safety practices.

Using a pneumatic line, blow out any debris from under the brake pole and around the aluminum spacers.

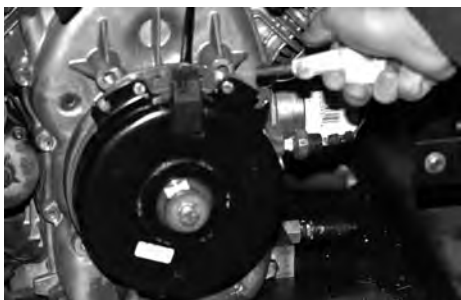


Figure 2

1. Loosen both brake mounting bolts 1/2 to 1 full turn as shown below. (Figure 3)

**⚠ WARNING** Do not remove brake pole from field shell/armature - brake pole tracks match with clutch off and brake on and need to continue to match after shim is removed to ensure proper brake torque.



Figure 3

2. Using needle nose pliers, or by hand, take hold of the tab and remove shim (do not discard shim until proper clutch function has been confirmed). (Figure 4)



Figure 4

3. Using a pneumatic line, blow out any debris from under the brake pole and around the aluminum spacers. (Figure 2)
4. Re-torque each bolt (M6 X 1) to 10 ft-lbs +/- .5 ft-lbs.
5. Using a .010 thick feeler gage, verify that a gap is present between the rotor and armature face on both sides of the brake pole as shown. (Figure 5 and 6)



Figure 5



Figure 6

**If clutch was removed from the tractor, be sure to torque the mounting bolt to the specified torque value:**

Thread Size	Grade Class	Torque lb-ft	Torque N-M
3/8-24 UNF	Grade 8	42-45 lb-ft	54-61 N-M
7/16-20 UNF	Grade 5 or 8	50-55 lb-ft	67-75 N-M
10X 1.5	Class 10.9	40-48 lb-ft	55-65 N-M

- If the gap is less than .010, then reinstall the shim and follow the trouble shooting procedure outlined in Warner Electric P1177 installation trouble shooting guide available on Warner Electric web site-[www.Warnerelectric.com](http://www.Warnerelectric.com) and consult owner's manual.
- If sufficient gap is present, then proceed to safety check outlined below.

**6. PERFORM SAFTY CHECK:**

**⚠CAUTION** Observe deck from position on mower seat with engine running to be certain deck is not engaged with PTO switch "off" and clutch de-energized. From same position, engage and disengage the PTO switch 10 consecutive times to ensure proper function of the clutch.

- If clutch still does not engage, then follow the trouble shooting procedure outlined in Warner Electric P1177 installation trouble shooting guide available on Warner Electric web site-[www.Warnerelectric.com](http://www.Warnerelectric.com) and consult owner's manual.

## Warranty

Warner Electric LLC warrants that it will repair or replace (whichever it deems advisable) any product manufactured and sold by it which proves to be defective in material or workmanship within a period of one (1) year from the date of original purchase for consumer, commercial or industrial use.

This warranty extends only to the original purchaser and is not transferable or assignable without Warner Electric LLC's prior consent.

Warranty service can be obtained in the U.S.A. by returning any defective product, transportation charges prepaid, to the appropriate Warner Electric LLC factory. Additional warranty information may be obtained by writing the Customer Satisfaction Department, Warner Electric LLC, 449 Gardner Street, South Beloit, Illinois 61080, or by calling 815-389-3771.

A purchase receipt or other proof of original purchase will be required before warranty service is rendered. If found defective under the terms of this warranty, repair or replacement will be made, without charge, together with a refund for transportation costs. If found not to be defective, you will be notified and, with your consent, the item will be repaired or replaced and returned to you at your expense.

This warranty covers normal use and does not cover damage or defect which results from alteration, accident, neglect, or improper installation, operation, or maintenance.

Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

Warner Electric LLC's obligation under this warranty is limited to the repair or replacement of the defective product and in no event shall Warner Electric LLC be liable for consequential, indirect, or incidental damages of any kind incurred by reason of the manufacture, sale or use of any defective product. Warner Electric LLC neither assumes nor authorizes any other person to give any other warranty or to assume any other obligation or liability on its behalf.

WITH RESPECT TO CONSUMER USE OF THE PRODUCT, ANY IMPLIED WARRANTIES WHICH THE CONSUMER MAY HAVE ARE LIMITED IN DURATION TO ONE YEAR FROM THE DATE OF ORIGINAL CONSUMER PURCHASE. WITH RESPECT TO COMMERCIAL AND INDUSTRIAL USES OF THE PRODUCT, THE FOREGOING WARRANTY IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES, WHETHER EXPRESSED OR IMPLIED BY OPERATION OF LAW OR OTHERWISE, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

### **Changes in Dimensions and Specifications**

All dimensions and specifications shown in Warner Electric catalogs are subject to change without notice. Weights do not include weight of boxing for shipment. Certified prints will be furnished without charge on request to Warner Electric.



**Warner Electric**  
449 Gardner Street • South Beloit, IL 61080  
815-389-3771 • Fax: 815-389-2582  
[www.warnerelectric.com](http://www.warnerelectric.com)  
**An Altra Industrial Motion Company**